


Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.

EAGLE 700 INTERNAL ASSEMBLY

Ref. Part Description	Qty.	700-E	700-S	700-H	700B
SNAP RINGS					
1 Snap Cover (excluding BRC)	1	211921-01	211921-01	211921-01	211921-01
2A Rubber Cover, Snap Ring (BRC)	1	-	-	-	211568
2B Snap Ring, Upper (BRC)	1	-	-	-	211298
INTERNAL ASSEMBLY					
3 Internal Assembly (A)	1	211435-xx	211914-xx	211435-xx	211454-xx
3 Int. Assy., Non-Potable (Purple) (A)	1	211728-xx	(211916-xx)	211728-xx	(E) 211729-xx
COVER ASSEMBLY					
4 Screw, Self-Tapping	2	210974	210974	210974	210974
5 Cover, Housing	1	211754-01	211754-01	211754-01	211754-01
-Ring, Screw	2	211236	211236	211236	211236
NOZZLES					
7 Housing, Nozzle - Black (B)	1	211745-01	211745-01	211745-01	211745-01
7 Housing, Nozzle - Purple (B)	1	211745-09	211745-09	211745-09	211745-09
- Nozzle/Stator Kit (A)	1	211434-xx	211434-xx	211434-xx	211434-xx
8 Nozzle Assembly, Range	1	-	-	-	-
9A Mid-Range Spreader Nozzle	1	See Diagram Below			
9B Close-in Spreader Nozzle	1	See Diagram Below			
16 Poppet	1	210405	210405	210405	210405
17 Stator (or spacer)	1	-	-	-	-
10 Seal, Retract	1	210354	210354	210354	210354
18 Screen	1	210403	210403	210403	210403
18A Screen, Seal-a-Matic Assy (B/BRC Only)	1	-	-	-	211292
BEARING / RISER-MOTOR ASSEMBLY					
11 O-Ring, Nozzle Housing	1	210366	210366	210366	210366
12 Guide, Bearing Assy, STD	1	211147	-	211147	-
12 Guide, Bearing Kit, LO-FLOW (C)	1	-	211263	-	211263
13 O-Ring, Bearing Guide	1	211242	211242	211242	211242
14 Spring, Retract	1	210364	210364	210364	210364
15 Riser Motor Assembly	1	210534	210534	210534	210534
15A Nozzle Base Replacement Kit w/ Seals	1	211841	211841	211841	211841
15B Pop-up Seal (White)	1	210399	210399	210399	210399
19 CASE ASSEMBLY	See Catalog No. 464				

- (A) Specify Nozzle Size when ordering. Available in # 28, 32, 36, 40, 44, 48.
- (B) To convert Dual Spreader Nozzle Housing to Cascade, insert Dual Nozzle Housing Plug #211593 in place of Mid-Range Spreader #211417 (See Diagram).
- (C) The LO-FLOW Bearing Guide #211263 may also be used on the 700 Series Electric and Hydraulic rotors.

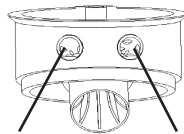

	Mid-Range nozzle (9A)	Close-In nozzle (9B)
Dual Spreader:	#28-36 Blue (Part No.: 211562)	Always Black With White Cascade Insert (Part No.: 211452)
	#40-48 Black (Part No.: 211417)	
Cascade:	Plugged (Part No.: 211593)	With White Cascade Insert Always Black (Part No.: 211452)
Original:	Without Insert Plugged Always Black (Part No.: 211417)	(Part No.: 211593)


Ref. KITS & Accessories	Qty.	P/N
1 Snap-Cover, Yellow		211921-02
1 Snap-Cover, White		211921-03
1 Snap-Cover, Purple (Non-Potable)		211921-04
Rubber Cover Kit (E, H, S) 211602		
2A Rubber Cover, Snap Ring	1	
2B Snap Ring, Upper	1	
5 Rubber Cover, Housing	1	
- Rubber Case Cover (E, H, S)	1	
Rubber Cover Kit (B & BRC) 211355		
2A Rubber Cover, Snap Ring	1	
2B Snap Ring, Upper	1	
5 Rubber Cover, Housing	1	
- Rubber Case Ring (B case)	1	
5 Cover, Yardage Marker Blank (White)		211752-03
5 Cover, Yardage Marker Blank (Black)		211752-01
Diffuser Screw Kit (for any nozzle) 211831		
7 Nozzle Housing, Drilled & Tapped	1	
- Diffuser Screws (not shown)	2	
5 Cover, Notched	1	
10 Retract Seal	1	
6 O-Ring, Screw	2	
- Plug for Spreader hole	1	
Dual Spreader Nozzle Housing Kit (Black) 211632-xx		
Dual Spreader Nozzle Housing Kit (Purple) 211633-xx		
8 Nozzle Assembly, Range	1	
9A Mid-Range Spreader Nozzle	1	
9B Close-in Spreader Nozzle	1	
7 Housing, Nozzle	1	
5 Cover, Housing	1	
10 Retract Seal	1	
6 O-Ring, Screw	2	
9B Debris Resistant 4-Channel Close-in		211618
- Nozzle (One-Piece Design - Slightly More Water)		

Stator / Poppet Configurations - Dual Spreader & Cascade


Color	Number	Electric Pressure Setting psi (bars)				Hyd. SAM, B
		60 (4,1)	70 (4,8)	80 (5,5)	100 (6,9)	
White	#28 / 14C	SPC	SPC	SPC	SPC	SPC
Blue	#32 / 16C	SPO	SPO	SPO	SPO	SPO
Yellow	#36 / 18C	SPO	SPO	SPO	SPO	SPO
Orange	#40 / 20C	SNP	SNP	SNP	SNP	SNP
Green	#44 / 22C	SNP	SNP	SNP	SNP	SNP
Black	#48 / 24C	N/R	SNP	SNP	SPR	SNP

SPC = Stator with Poppet Closed SO = Screen Only
 SPO = Stator with Poppet Open SPR = = Spacer and Screen
 SNP = Stator No Poppet N/R = Not a Recommended Pressure and Nozzle Setting

Stator with Poppet Closed
Should be tight when snapped in

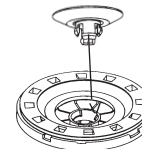

Stator with Poppet Open
Should be loose when snapped in

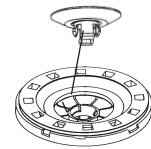

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.